




via Torino 30
10070 Vallo Torinese - Italy
Tel. +39 011 19 624 234
www.eshop-candelx.it

Model: VIC SWQ10

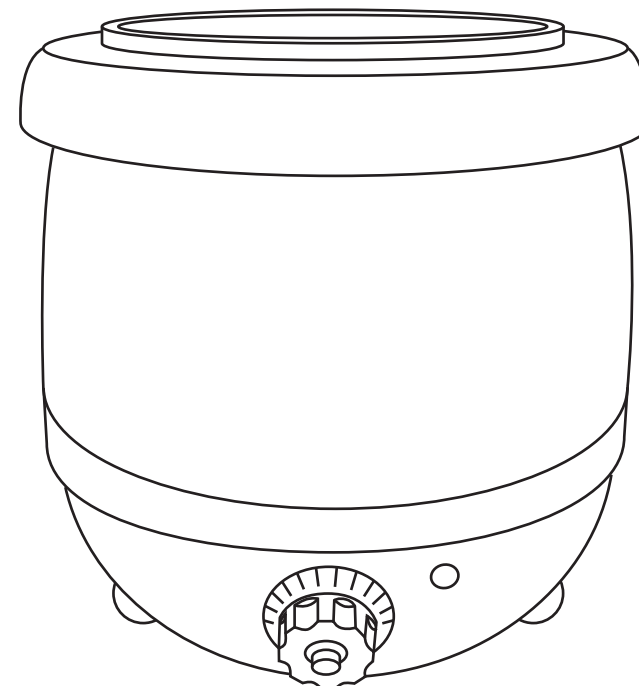

MANUALE D'USO
USER MANUAL

FUSORE PER CERA
WAX MELTER



WAX MELTER - NOT INCLUDED

(you can buy on our website: www.eshop-candelx.it)

8 kg wax melter kit consisting of three cylinders with a diameter of 8.5 cm and a height of 22.5 cm (Fig.1), a plexiglass ring with an external diameter of 24.5 cm and a plastic clamp.

About 2 liters of water is poured into the melter (or pot) (fig.3) which is heated to the desired temperature; the heat is given off by the water to the metal cylinders where the wax is, which will melt without being overheated.

This kit allows you to melt the wax in containers that can be easily removed using the pliers supplied (fig.4). Also useful when you want to melt colored wax with different colors or to color the candle by immersion being high enough to be able to dip a 17-18 cm high candle.


Instead of the melter, it can also be used with a saucepan with a minimum height of 24 cm and a diameter of 21-23 cm.

Metal cylinder dimensions: internal diameter 8.5 cm - height 22.5 cm

Power: 400 W
Voltage: 220-230 V
Frequency: 50-60 Hz

MARKINGS

CE RoHS

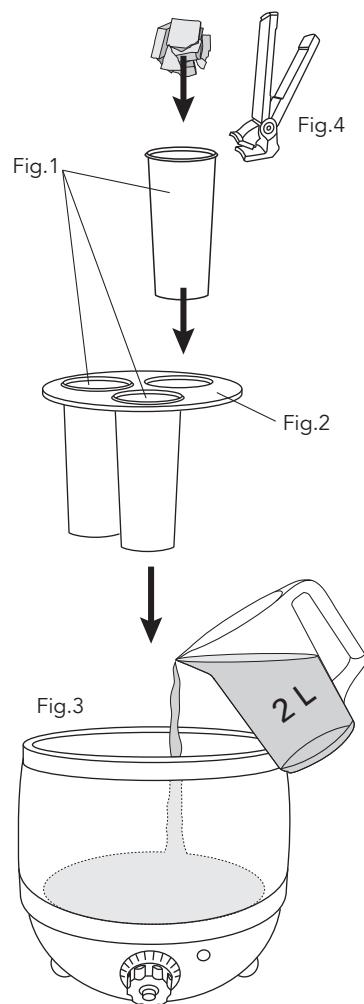

I FUSORE PER CERA

Consigli di utilizzo:

1) Versare circa 0,6 lt di acqua nel fusore di alluminio dove abbiamo tolto il cilindro di acciaio (non superare mai il livello MAX) (Fig.1). Non mettere mai direttamente la cera a contatto con questa parte più esterna di alluminio perché potrebbe ossidarsi e subire una corrosione. Tenere pulita questa parte con acqua bollente e sapone.

2) Mettere l'anello di plastica. (Fig.2)


3) Inserire il cilindro di acciaio (Fig.3) e aggiungere la cera/paraffina da fondere. (Fig.4)

4) Il fusore funziona a bagno Maria e la temperatura massima raggiunta sarà di circa 95-98 °C. Si consiglia l'uso del coperchio per raggiungere in un tempo più breve la temperatura.

5) Portare la manopola del regolatore/termostato sulla temperatura desiderata. (Fig.5)

6) Controllare con un termometro la temperatura della cera e se troppo bassa per la vostra lavorazione portare il regolatore su una posizione superiore.

Il sistema di riscaldamento a "bagno Maria" garantisce di non superare mai la temperatura di sicurezza della cera detto anche scientificamente "punto di fiamma" (che a seconda della cera è intorno ai 170 °C).

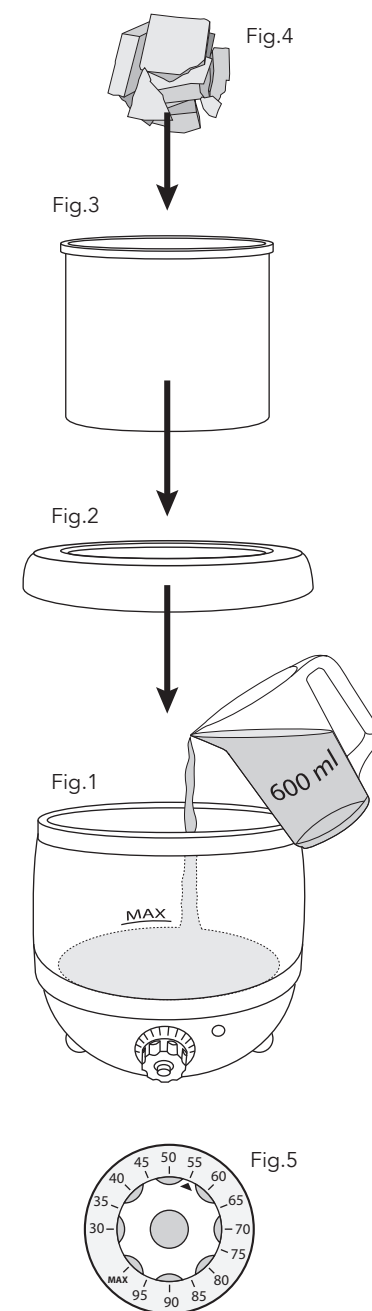

KIT PER FUSORE CERA - NON COMPRESO

(acquistabile a parte dal sito www.eshop-candelx.it)

Kit per fusore cera da 8 kg costituito da tre cilindri di diametro 8,5 cm e altezza 22,5 cm (Fig.1), un anello di plexigas con diametro esterno di 24,5 cm e una pinza di plastica.

Nel fusore (o nella pentola) si versa circa 2 litri di acqua (fig.3) che viene riscaldata a temperatura desiderata; il calore è ceduto dall'acqua ai cilindri di metallo dove si trova la cera che fonderà senza essere surriscaldata.

Questo kit permette di poter fondere la cera in contenitori facilmente estraibili tramite la pinza in dotazione (fig.4). Utile anche quando si vuole fondere la cera colorata con diversi colori oppure di colorare la candela per immersione essendo abbastanza alti da poter intingere una candela alta 17-18 cm.


Al posto del fusore può essere anche usata con una pentola alta minimo 24 cm e con diametro 21-23 cm.

Dimensioni cilindro metallo: diametro interno 8,5 cm - altezza 22,5 cm

Resistenza: 400 W
Volt: 220-230 V
Frequenza: 50-60 Hz

MARCATURE

CE RoHS

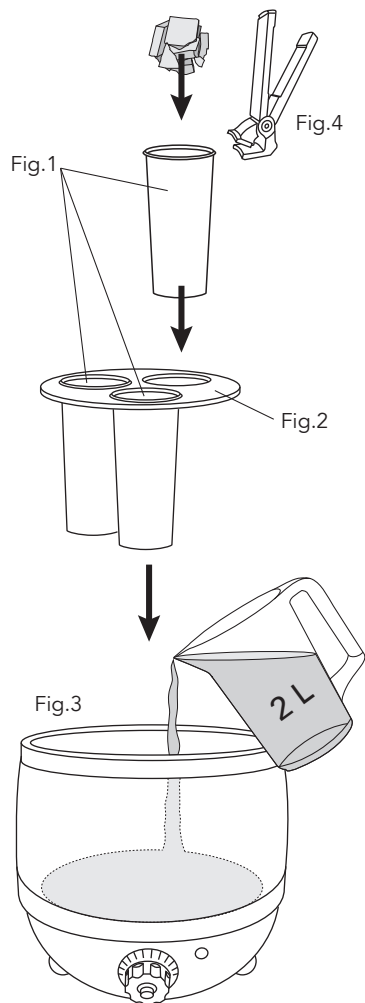

GB WAX MELTER

Usage tips:

1) Pour about 0.6 liters of water into the aluminum melter where we removed the steel cylinder (never exceed the MAX level) (Fig.1). Never put the wax directly in contact with this outermost part of aluminum because it could oxidize and undergo corrosion. Keep this part clean with boiling soapy water.

2) Put on the plastic ring. (Fig.2)

3) Insert the steel cylinder (Fig.3) and add the wax/paraffin to melt. (Fig.4)

4) The melter works in a bain marie and the maximum temperature reached will be around 95-98 °C. We recommend using the lid to reach the temperature more quickly.

5) Turn the regulator/thermostat knob to the desired temperature. (Fig.5)

6) Check the temperature of the wax with a thermometer and if it is too low for your work, move the regulator to a higher position.

The "bain marie" heating system guarantees never to exceed the safety temperature of the wax, also scientifically known as the "flame point" (which is around 170 °C depending on the wax).

