


Model: HD-Y100A

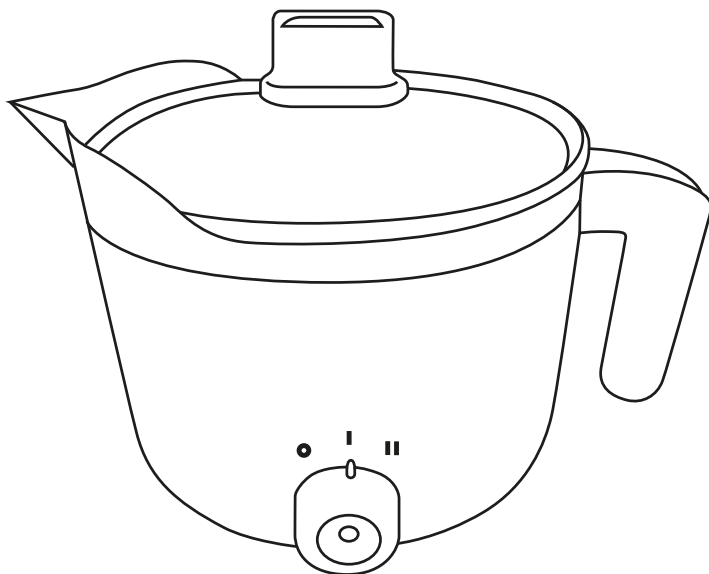

MANUALE D'USO
USER MANUAL

FUSORE PER CERA

WAX MELTER

I FUSORE PER CERA

Leggere attentamente tutte le informazioni prima dell'uso.

AVVERTENZE E PRECAUZIONI

Questo prodotto è destinato esclusivamente all'uso domestico o simile. Non utilizzare l'apparecchio per scopi diversi da quello previsto.

Assicurarsi che la tensione nominale di questo prodotto corrisponda a quella utilizzata e utilizzare una presa a tre poli con messa a terra affidabile, evitando di condividere la presa con altre prese elettriche per garantire la sicurezza personale.

Assicurarsi che l'interruttore a manopola sia in posizione "Off (O)" (Fig.1) prima dell'uso. Sorvegliare i bambini per assicurarsi che non giochino con l'apparecchio.

Per evitare danni all'apparecchio, non utilizzare prodotti chimici alcalini per la pulizia; utilizzare invece un panno morbido e un detergente delicato.

Non immergere l'apparecchio in acqua o altri liquidi. Se il cavo è danneggiato, deve essere sostituito dal produttore, dal suo servizio di assistenza o da personale qualificato per evitare pericoli.

L'apparecchio deve essere sempre riempito di cera durante il funzionamento. Non utilizzare mai a vuoto.

ISTRUZIONI PER L'USO IMPORTANTE

Non spostare l'unità durante il funzionamento.


Non toccare la superficie del contenitore durante il funzionamento.

Non aggiungere cera oltre l'80% della capacità massima di liquido.

Non accendere il fusore prima di aver inserito la presa nella corrente.

PER SCIOLGERE LA CERA

1. Collegare l'apparecchio alla presa di corrente.
2. Versare la cera nel contenitore, non superare l'80% della capacità massima, e coprire il coperchio in vetro (fig.2).
3. Ruotare la manopola in senso orario in posizione

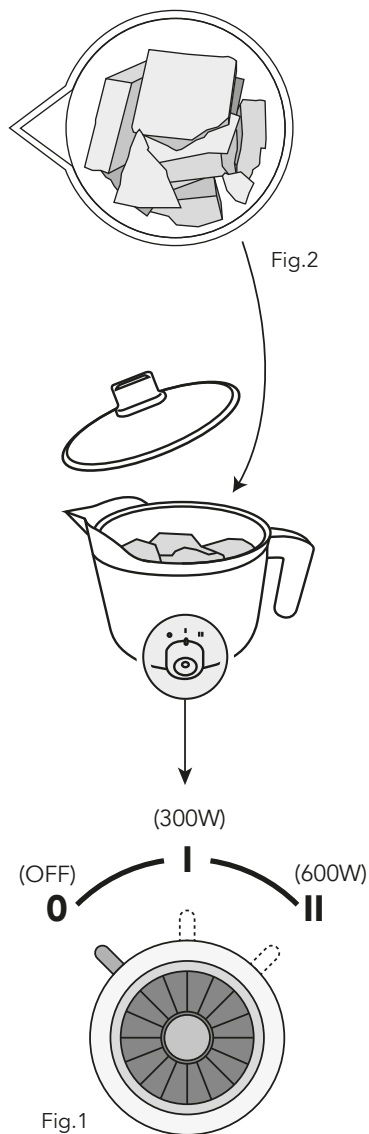

"I" o "II": la spia si accenderà e l'unità si riscalderà. La prima velocità ("posizione") funziona a metà potenza, la seconda velocità ("posizione II") funziona a piena potenza; può essere regolata in base all'uso personale (Fig.1).

Entrambe le impostazioni "I" o "II" possono raggiungere massimo i 100 °C, "I" funziona a 300 watt e "II" a 600 watt; maggiore è la potenza, più rapido è il riscaldamento.

NOTA BENE : Per monitorare la temperatura utilizzare un termometro immerso nella cera; assicurarsi che la lettura sia accurata.

ISTRUZIONI PER LA CURA E LA PULIZIA

IMPORTANTE:

Prima della pulizia, spegnere l'alimentazione e scollegare.

Attendere sempre che il contenitore e il contenitore dell'unità di fusione siano puliti.

Non immergere mai in acqua.

Non versare mai acqua fredda nel contenitore dell'unità di fusione caldo.

Per evitare danni all'apparecchio, utilizzare un panno morbido e un detergente delicato durante la pulizia.

PULIZIA DEL CONTENITORE

1. Una volta raffreddato, rimuovere eventuali residui.
2. Una volta raffreddato, lavare l'interno con un detergente delicato.
3. Rimuovere le macchie ostinate con una paglietta di plastica.
4. Asciugare con un panno morbido.
5. Se non si riesce a pulire nei modi indicati far bollire dell'acqua e aspettare che si raffreddi ; la cera residua verrà in superficie e si solidificherà.

DATI TECNICI

Modello: HD-Y100

Alimentazione: CA 220 V 50 Hz

Consumo energetico: 300 W/600 W

Capacità: 1,7 litri

MARCATURE

C E RoHS

Please read all information prior to use.

WARNING AND CAUTION

This product is intended for household or similar use only. Do not use the appliance for any purpose other than its intended use.

Please ensure the rated voltage of this product is consistent with the voltage you use, and use a three—pin socket with reliable grounding, and do not share a power socket with other electricity to ensure personal safety.

Please ensure the knob switch is in the "Off (0)" (Fig.1) position prior to operating. Children should be supervised to ensure they do not play with the appliance. To prevent damage to the appliance do not use alkaline cleaning chemicals when cleaning, a soft cloth and mild detergent should be used.

Do not immerse the appliance in water or any other liquid. If cord is damaged, it must be replaced by the manufacturer, its service agent or similar by qualified persons in order to avoid a hazard. Unit must always be filled with wax when operating. Never operate when Empty.

OPERATING INSTRUCTIONS

IMPORTANT

Do not move unit during operation. Do not touch the surface of the vessel during operation.


Do not add wax exceed 80% of the full capacity to prevent liquid overflow and cause electric shock.

Unit should not be operated without wax inside the vessel.

Please ensure the knob switch is in the "Off (0)" position prior to operating.

MELTING THE WAX

- 1.Plug appliance into the power source.
- 2.Put the wax into the pot, do not exceed 80% of the full capacity, and cover the glass lid (Fig.2) .
- 3.Turn the knob clockwise to the "I" or "II" position, the indicator light will be on, the unit will heat up. First gear ("I" position) is half power operation second gear ("II" position) is full power operation, it can be

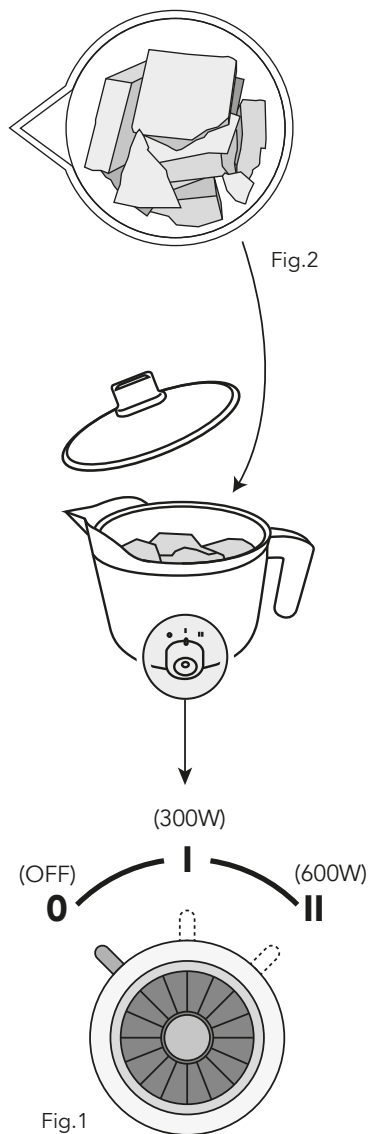

adjusted i according to personal use. "I" or "II" both settings can reach max 100 'C, "" w l works on 300 watts, and "II" works on 600 watts, the larger the power, the faster the heating.

NOTE

To monitor the temperature please use a thermometer for an accurate reading

CARE & CLEANING INSTRUCTIONS

Take care when handling the vessel and any metal surfaces whilst it is in use, as these will be hot. Be careful when lifting the lid after heating, as residual heat can result in serious burns. Never place face over vessel.

IMPORTANT

Before cleaning, turn off power and unplug from the power source. Always wait for the melter vessel and contents to cool down before cleaning the vessel. Never immerse in water. Never put cold water into the hot melter vessel. To prevent damage to the appliance do not use alkaline cleaning agents when cleaning, use a soft cloth and mild detergent.

CLEANING THE VESSEL

1. When cooled, remove any excess particles.
2. When cooled, wash the interior thoroughly in hot water and a non—abra— sive detergent.
3. Remove stubborn spots with a plastic washing pad or sponge.

WARNING

Do not use steel wool or coarse scouring pads.
These may damage the surface.
Dry off with soft cloth.

CLEANING THE EXTERIOR

When cooled, wipe from outside with a damp cloth. f you have any concerns regarding the performance and use of your appliance, please contact the supplier.

TECHNICAL SPECIFICATIONS

Model No: HD—Y100
Power Supply: AC 220V 50HZ
Energy Consumption: 300W/600W
Capacity: 1.7 Litre

MARKINGS

C E RoHS



via Torino 30
10070 Vallo Torinese - Italy
Tel. +39 011 19 624 234
www.eshop-candelx.it